

Tech-Talk

83402

Technical information on new Woodward features or products

PID Control

By Larry McLeister



WOODWARD's TECH-TALK SERIES

Woodward TECH-TALKS are technical documents written by Woodward's engineers, technicians, or other technical people, which discuss or explain a variety of subjects, ranging from, but not limited to, new technical concepts, or those which could be better understood, to solutions to specific industrial problems, to detailed technical explanations of new Woodward features or products.

The goals of the TECH-TALK series are:


- ! To provide ready access to detailed technical information that can be available to customers
- ! To establish a communication path between seasoned and knowledgeable members and other members who could benefit from their knowledge
- ! To provide a library of technically detailed documentation about our products, application issues, and our industry

When a Tech Talk is revised, a revision letter is added to the manual number and text changes are indicated by black bars in the margins of the pages.

Woodward wishes to thank and acknowledge E. I. du Pont De Nemours & Company, Inc. for granting permission to use information presented in Du Pont's *ELIAS Instrumentation Training Program* booklet in this Woodward publication. Du Pont's copyright to the above mention document is as follows:

COPYRIGHT (1970) E. I. DU PONT DE NEMOURS & COMPANY, INC.

CHAPTER 1 INTRODUCTION

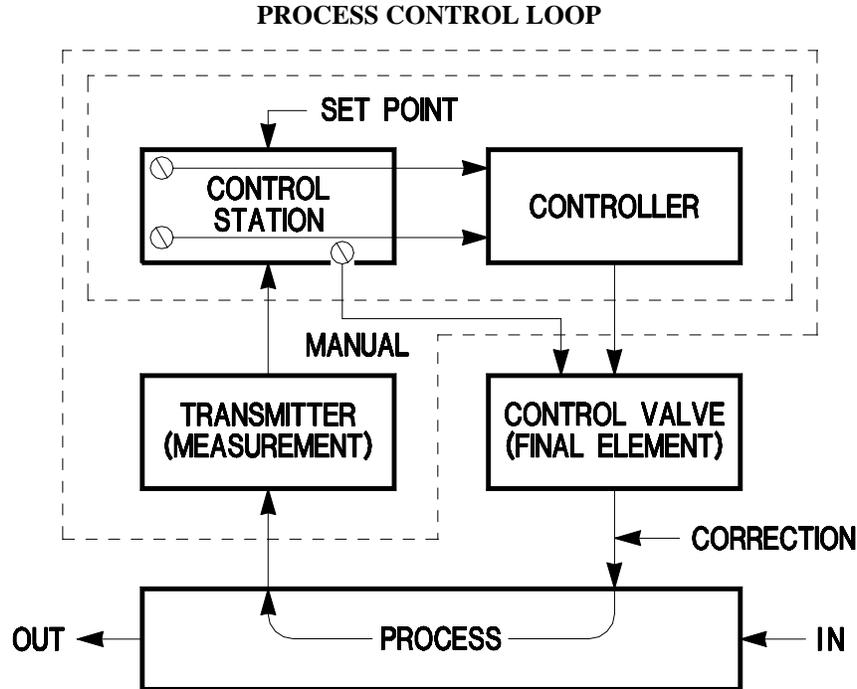

830-355
92-07-31 DAR


With this block diagram of a control loop, the following can be shown; 1) the dashes surrounding the measurement transmitter, the control station and the controller indicate the "local" control station since all parts are within one case; 2) the dashes surrounding the control station and controller only indicate the "remote" control station. The controller in this case may be mounted one of three ways; 1) on the control station; 2) behind the control panel on a rack with other controllers; 3) in the field on or near the control valve. It may also be an integral part of the control station as the one used in the training setup.

Both types of control stations will have some way of indicating (or recording) the process variable, some means for adjusting the desired set point, and a means for reading the controller output to the control valve. The "local" control station may or may not have a means for "manually" controlling the control valve. The "remote" will always have this facility. The "local" control station requires frequent visitation to determine quality of control. The "remote" station is centrally located, therefore reducing travel time and allowing side-by-side control quality scanning.

The function of each block of the diagram is as follows:

1. Measurement transmitter - measures the process variable (temperature, pressure, level, flow, or analysis) and converts the measurement to units useful to the controller, 3-15 PSIG or some electronic value such as 4-20 milliamperes.

2. The control station provides facility for setting the desired control point, reading the value of the measurement, transferring the operation from manual to automatic or automatic to manual, and allows manual loading of the control valve.
3. The controller takes the set point value of the control station, compares its value to the measurement and reacts to the difference according to the values set on each response, proportional, reset and derivative.
4. The output signal from the controller positions the control valve.
5. The process changes resulting from the valve changes are felt by the measurement and the procedure continues.

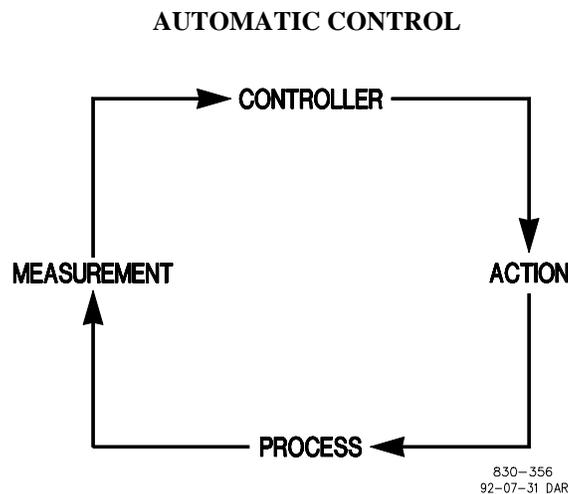

This chart is a simplified form of the previous chart. There are three things that take place; 1) measurement; 2) decision, 3) action.

Measurement, of course, is the process variable to be controlled.

The decision is the controller.

The action is the control valve, sometimes called the final element.

Note that the arrows flow continuously as does the function of any closed loop control system. All sections of the control system are continuously connected, even though action does not take place unless a change takes place that results in the process variable measured deviating from the set point (desired control point).

To break the connection between any section of the loop would result in an open loop configuration. Of course, the process will then not respond to controller action. However, as later charts will show, open loop configuration is a unique way of observing controller actions or responses on an individual basis and without the interfering process response.

CONTROL LOOP

- **Measurement (Transmitter)**
 1. **Temperature**
 2. **Pressure**
 3. **Level**
 4. **Flow**
 5. **X-Analysis**

- **Decision (Controller)**
 1. **Set point vs. measurement**
 2. **Controller response**

- **Action (Final Element)**
 1. **Control valve**
 2. **Pump**
 3. **Rheostat**

Control loop components consist of those shown on the above chart. As mentioned earlier, three things take place in a closed loop control system - Measurement, Decision, Action, whenever the system is in automatic. The measurement section is connected directly to the process and transmits the variable to be controlled to the control station, usually some distance away. The control station, which technically includes the controller, allows comparison between the desired control point (set point) and the measured control point. The amount of the deviation, the rate of the deviation and the duration of the deviation all predict controller response according to the controller's gain, derivative and reset settings.

The action is simply the result of the controller output. It may be something other than a control valve.

CONTROL MODES

- **ON-OFF or (DEADBAND)**
- **PROPORTIONAL or (PROP_GN)**
- **INTEGRAL or (INT_GN)**
- **DERIVATIVE or (S_D_R)**

As mentioned earlier, modes of control refer to the various types of control available. Also it must be remembered that the type of control should match the process. For example, on-off control is quite adequate for home heating systems, but would be very unsatisfactory in most petroleum/chemical applications because of its cyclic characteristic.

Proportional control eliminates the cyclic characteristics of the on-off mode.

Integral and Derivative are refinements of and work in conjunction with proportional control. Special studies of each follow.

CONTROL MODES (CAR ANALOGY)

ON-OFF – One speed windshield wiper in light rain.

One way to describe terms normally unfamiliar is to draw an analogy to something which is familiar.

The analogy here for On-Off control is turning the windshield wiper "on" then "off". Its speed is not changed. It is simply turned "on" for one wipe, then turned off.

As a matter of fact, car manufacturers have a position on the wiper control that produces an "On-Off" characteristic.

PROPORTIONAL CONTROL

Setting hand throttle to keep constant speed on straight and level.

Proportional control (using the same analogy) results in a certain speed as long as the car is not subjected to any load change such as a hill.

If a hand throttle is set to any particular setting, the speed of the car will remain constant as long as the car remains straight and level. If the car goes up a hill it will slow down. Of course, going down a hill the car would gain speed.

Proportional response is directly proportional to a process change.

INTEGRAL (RESET)

Cruise control maintains constant speed regardless of hills.

Integral, sometimes called reset, provides additional action to the original proportional response as long as the process variable remains away from the set point. Integral is a function of the magnitude and duration of the deviation.

In this analogy the reset response would keep the car speed constant regardless of the terrain.

Integral compensates for process and set point load changes.

DERIVATIVE (PREACT AND RATE TIME)

Accelerating into high speed lane with merging traffic.

Derivative sometimes called "preact" or "rate", is very difficult to draw an accurate analogy to, because the action takes place only when the process changes and is directly related to the speed at which the process changes.

Merging into high speed traffic of a freeway from an "on" ramp is no easy task and requires accelerated correction (temporary overcorrection) in both increasing and decreasing directions. The application of brakes to fall behind the car in the first continuous lane or passing gear to get ahead of the car in the first continuous lane is derivative action.

CONTROL RESPONSES


- **ON-OFF cyclic control**
- **PROPORTIONAL throttling**
- **INTEGRAL compensation (load or set point change)**
- **DERIVATIVE accelerated action**
- **PROPORTIONAL + INTEGRAL throttling with compensation**
- **PROPORTIONAL + DERIVATIVE throttling with accelerated action**
- **PROPORTIONAL + INTEGRAL + DERIVATIVE throttling with compensation and accelerated action**

The above chart shows the characteristics of the different control responses. Keep in mind that integral and derivative work in conjunction with proportional response.

Proportional response improves the cyclic characteristics of On-Off by providing a throttling action or some portion of the maximum available. It is proportional to the process variable change only.

Integral compensates for load changes - process initiated or set point initiated by adding additional proportional action until the measured variable and the desired control point (set point) are the same. Integral action takes place only when a difference (deviation) exists between the Set Point and the process measurement. Derivative accelerates (advances) the Proportional action based on the speed of the process change only. It compensates for long transfer lags and reduces overshoot resulting from large process disturbances. Combinations of Proportional, Integral, Derivative will provide the type of process control required.

CHAPTER 2 SINGLE-MODE CONTROL

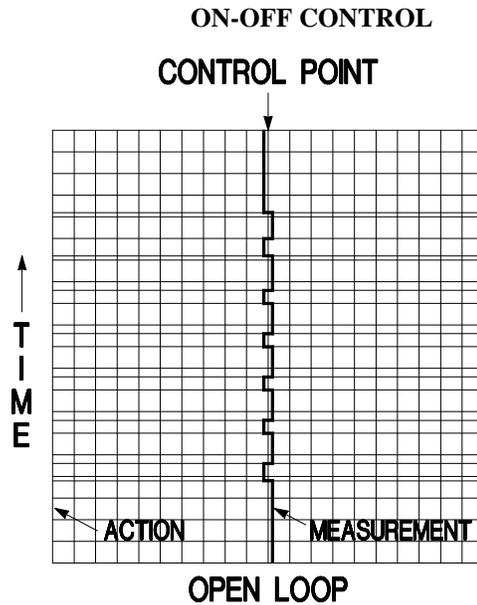

CONTROLLER RESPONSE ONLY—
NO PROCESS REACTION


830-357
92-07-31 DAR

The control point is at 50% of the scale. The "open loop adjust" manually moves the measurement back and forth across the control point. The controller is in automatic with its responses set to produce "ON-OFF" control characteristic.

Whenever the measurement is moved above the control point, the controller output moves the action to zero (let's say valve closed). Whenever the measurement is moved below the control point, the controller drives the action to full output (valve open).


Remember the measurement is driven in open loop; therefore, as long as the measurement is held above the control point, the controller (in full automatic) will hold the valve fully closed and conversely as long as the measurement is held below the control point, the controller will hold the valve fully opened.

This action is seen in final control elements that are either open or closed. Examples of these elements are: some types of control valves, solenoid valves, solenoid levers, and other devices that may be controlled by relay outputs.

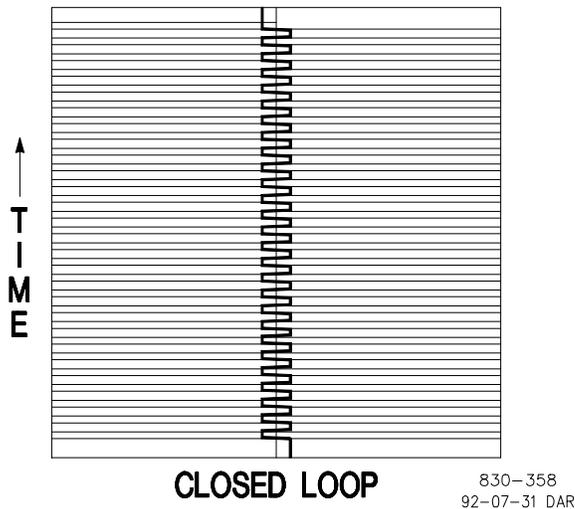

This chart shows "ON-OFF" control in closed loop configuration. The controller is, of course, in automatic and its responses are set to produce "ON-OFF" control. Now however, the process measurement will be returned toward the control point as a result of the valve being driven to its extreme, but because the valve is driven to its extreme, the process measurement has inertia and will overshoot the control point. As soon as the process measurement crosses the control point the controller will drive the valve to its other extreme, thereby causing the cyclic action shown on the chart. Inertia of the process will produce overshoot in both directions.


Since "ON-OFF" configuration is very simple and quite uncommon in its use in process control, it will not be discussed further. It is shown here only to define its characteristic and to show there are applications for it, such as home heating systems.

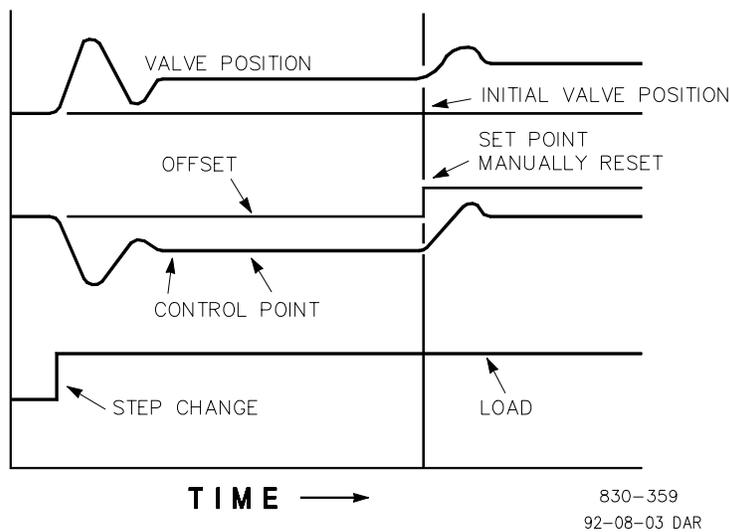

PROPORTIONAL RESPONSE

This chart (in Closed Loop) graphically displays the characteristic of Proportional response. Beginning at the bottom of the graph, a step change is introduced and held as a load change. As a result of the step change, the measurement droops to control at a lower value since the valve movement was Proportional to the change in measurement only. This results in Offset between the original desired Set Point and the resulting droop in the Control Point. As can be seen, one method of correcting this Offset would be to manually

reset the Set Point to bring the Control Point back up to the desired (control) Set Point. This results in a different valve position. Of course, additional process load changes or Set Point load changes would result in additional offset.

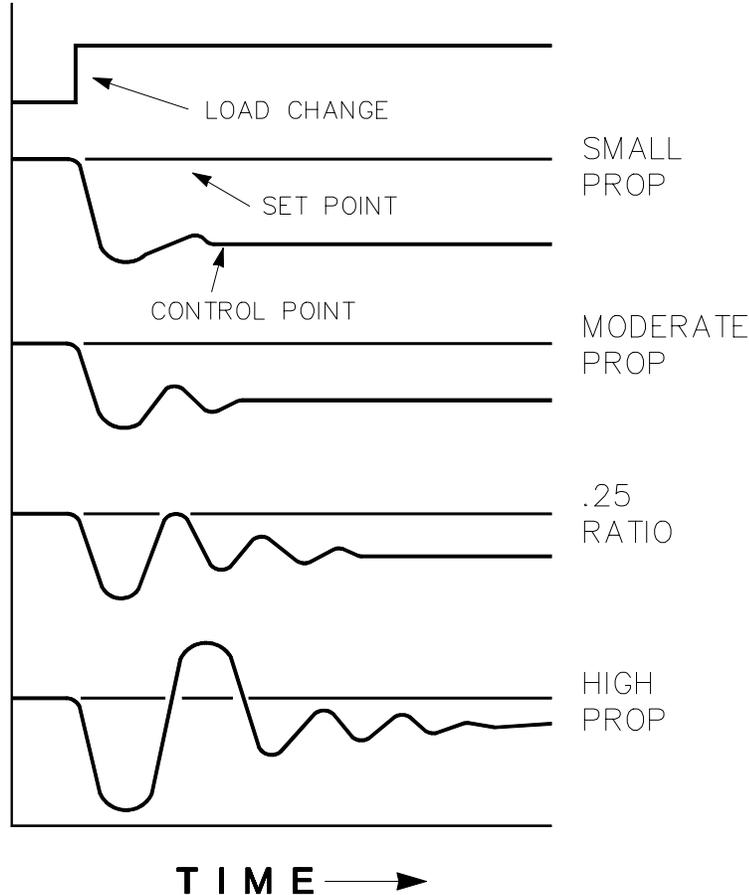

830-360
92-08-03 DAR

PROPORTIONAL GAIN (EFFECT OF SETTINGS)

This graph shows the effect of Proportional gain settings on control.

Starting at the top of the graph a load change is introduced. With a small Proportional gain (meaning a large process change is required to produce full valve travel), stability is good but offset is very high.

With a moderate gain setting (higher number setting) stability is still good - offset is still fairly high.

With a high setting, offset is considerably smaller but the stability is poor. The 0.25 ratio effects a minimum area whereby the offset is reduced to a minimum while stability is in a decaying manner at 0.25% ratio. The 0.25% (1/4%) decay ratio will be discussed further during each subject block covered.

The decay ratio used (0.25%) means that if the second cycle is 1/4 of the first cycle, then each succeeding cycle will be 1/4 of the preceding cycle until the cycle is not visible. The last section of this document will cover recognizing the 1/4 decay ratio more thoroughly.

Since Proportional gain is adjusted to produce (only) the proper stability of a process, do not continue increasing its effect to correct offset conditions.

CHAPTER 2 SUMMARY

Controller output change proportional to process change:

- **Provides stability**
- **Introduces offset**

Proportional Control. Controller output change is Proportional to the process change. The amount of controller change is directly related to the process change and the Proportional gain setting on the controller. If there is no process change, there is no change in output from the controller (or valve change) regardless of the deviation.

The amount of stability and offset is directly related to the setting of the Proportional setting. Stability is of course also affected by the stability of the process.

In essence, the amount of output from the controller due to the Proportional setting is from the error. If there is no error, then there is no Proportional effect.

The units for expressing amounts are:


- % P.B. (for PROPORTIONAL BAND - reciprocal of Gain)
- Gain
- Sensitivity (same action as Gain)

CHAPTER 2 REVIEW QUESTIONS

1. What are the characteristics of On-Off Control?
2. When and where would On-Off Control be used?
3. Describe Proportional Gain.
4. What is the characteristic of Proportional?
5. What units are used for expressing the amount of Proportional?
6. How does Proportional act?
7. When does Proportional act?
8. How much?
9. What happens when the deviation changes?
10. What is a bad feature of Proportional?
11. What does a high Proportional number yield?
12. What does a low Proportional number yield?

CHAPTER 3 INTEGRAL AND DERIVATIVE CONTROL

PROPORTIONAL + INTEGRAL (OPEN LOOP)

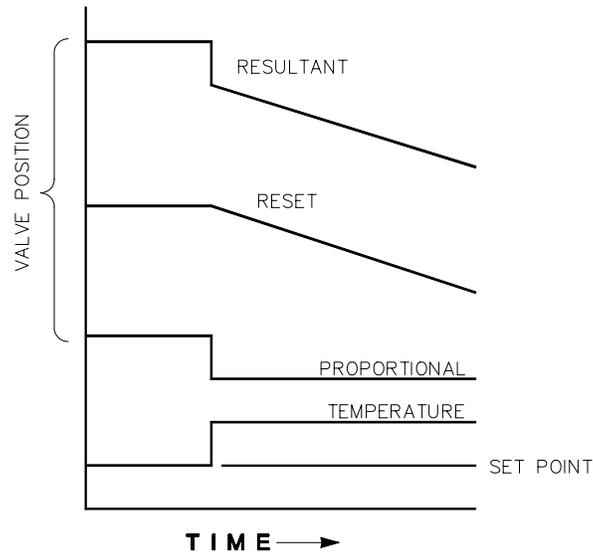

Integral response is provided to eliminate the offset that resulted from straight Proportional control.

This chart shows how the controller action is Proportional to the measurement change, but as we saw earlier, this results in offset.

The Integral (or Reset) action is a function of both time and magnitude of the deviation. As long as an offset condition (due to load changes) exists, Integral action is taking place. The amount of Integral action is a function of four things:

1. The magnitude of the deviation.
2. The duration of the deviation.
3. The Proportional gain setting.
4. The Integral setting.

In this Open Loop graph, the Integral response is shown increasing due to the offset condition existing between the temperature and the set point. The resultant action is the top curve showing the step Proportional response that ends as soon as the measurement stops changing. Then the Integral (or reset) action is added to the Proportional action in an amount equal to the Integral of the deviation. In other words, Reset action continues (in either or both directions) as long as there is a difference (deviation) between the set point and the process measurement.

In this case, the deviation will never be eliminated (or even reduced) because the system is in Open Loop.

INTEGRAL

(Repeats per Minute)

Time of reset action to duplicate proportional action resulting from initial deviation

Units are either: Minutes/Repeat
or Repeats/Minute


As mentioned earlier, there are two ways of expressing Integral action. The function may also be called Reset but the units for expressing the amount are related to Reset Time or Reset Rate.

Integral as stated in the Woodward controls is repeats per minute (or Reset Rate) and is labeled as "INT_GN" on the PID controller. Therefore, a high amount of Integral gain (high number) would result in a large amount of Reset action. Conversely, a low Integral gain (low number) would result in a slower reset action.

Reset Time is just the reciprocal of Reset Rate in that the time per repeats is the unit measure. This "minutes" per repeat is the same repeat discussed in "repeats per minute" of Reset Time. The repeat is of course, the duplication of the proportional response. However, in this case (Reset Time) it is the time of the repeats that the proportional action is duplicated.

Some controllers do not adequately identify the Integral mode. Therefore, it is extremely important that the person attempting tuning operations first identify the Integral units before starting the tuning procedure. Otherwise he will not necessarily turn the Integral to its minimum and his tuning ability will be nil.

PROPORTIONAL + INTEGRAL (CLOSED LOOP)

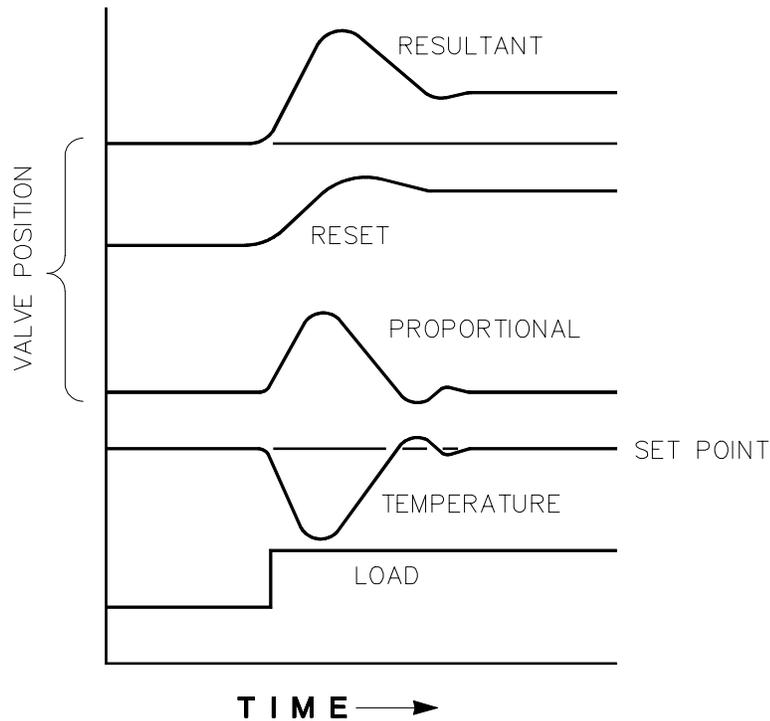

830-362
92-08-03 DAR

This chart (in Closed Loop) is showing the effect of Integral action.

The bottom curve is the load change.


The next curve shows the set point and the measured variable, temperature. With the load change the temperature droops or deviates from the set point.

The next highest curve is the Proportional action and follows the measured variable proportionately because the gain setting is obviously very nearly 1 (or a P.B. of 100%).

The Integral curve adds to the Proportional curve resulting in a different valve position, thereby returning the process to the Set Point.

In Closed Loop, however (as opposed to Open Loop), as the measurement decays toward the Set Point the Proportional action is taking place Proportionally to the measurement change, and the Integral action is decaying proportionately to the magnitude and duration of the deviation until the measurement reaches the set point at which time the Integral action is zero.

INTEGRAL (EFFECTS OF SETTINGS)

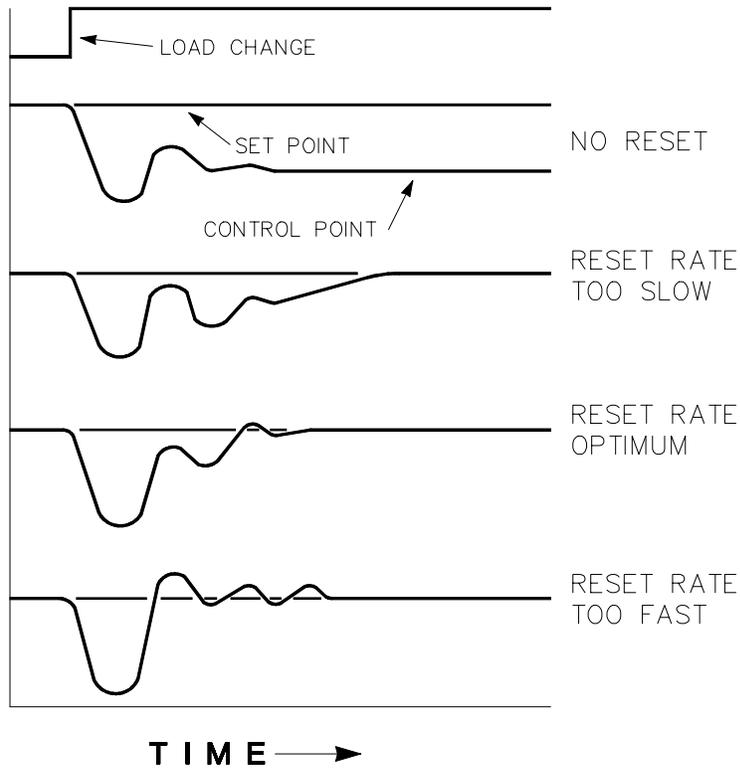

830-363
92-08-03 DAR


This chart shows the effect of fast or slow Integral action. The actual setting number depends on whether the Reset is Time or Rate.

Reset Time - High number = slow Reset Low number = fast Reset Action
Reset Rate - High number = fast Reset Low number = slow Reset Action

The graph is relatively self-explanatory in that for a given load change an offset results with Proportional response only.

Since recovery time (for a given load change) is important, the Integral setting should remove the offset in minimum time without adding additional cycling. If two cycles are added, then too much Reset has been added. Of course, Proportional only must first establish the 1/4 decay ratio. If increased cycling occurs, the Integral must be turned off or the controller switched to "manual" if allowed to go too far. Ideally, the process should not continue to cycle after the set point has been reached as in the second curve from the bottom.

DERIVATIVE RESPONSE

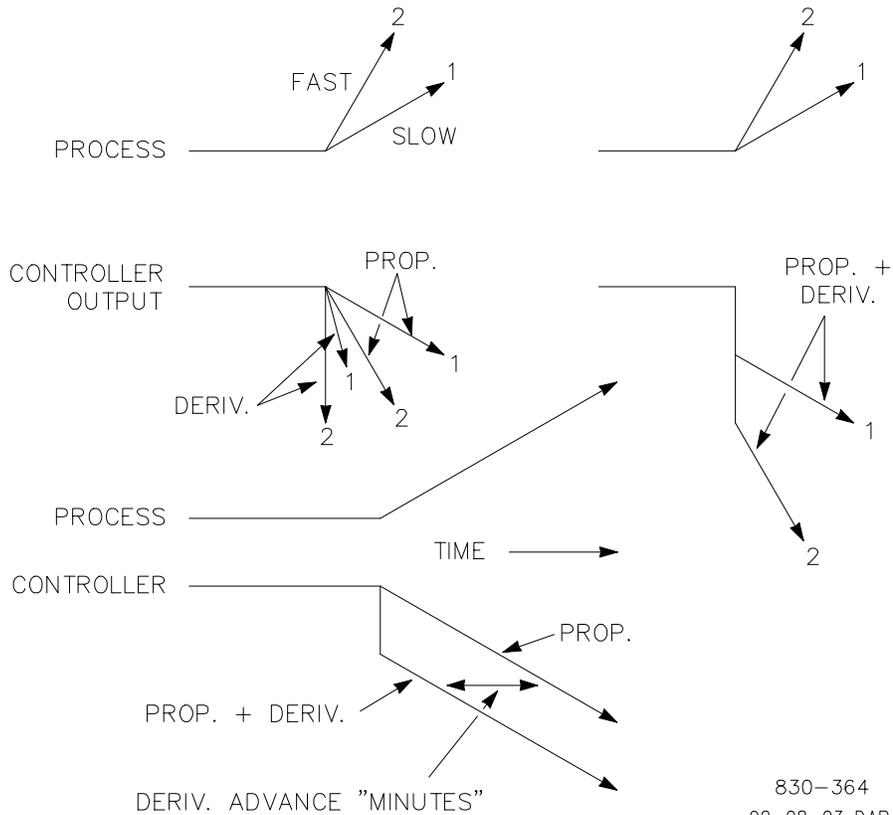

In a process control loop the Derivative action is directly related to how fast the process changes (rate of change). If the process change is slow then the Derivative action is proportional to that rate of change.

The top left graph shows the process change at two rates, #1 slow and #2 fast. The controller output just below shows proportional action follows the process change exactly, while the Derivative action advances the proportional action.

The top right graph again shows the process changes, #1 slow and #2 fast. The graph just beneath shows the resultant curves advanced directly related to the rate of change of the process.

The graph at the bottom center shows a process change and the controller response to this change in process. The proportional action is advanced when Derivative action is applied. The amount of this advancement in time is Derivative Time.

DERIVATIVE (MINUTES)

Units: RATIO
OR MINUTES

Time interval by which derivative action advances proportional action.

Derivative action takes place at only three times:

1. When the process starts to change.
2. When the rate of change takes place in the process.
3. When the process stops changing.

The net result of Derivative action is to oppose any process change and combined with Proportional action to reduce stabilization time in returning the process to the set point after an upset. Derivative will not remove offset.

Woodward Derivative is split into two working domains, Input dominant and Feedback dominant. The allowed values for S_D_R range from 0 to 100, never set the S_D_R negative. The most common derivative is Feedback dominant, it is automatically selected with an S_D_R from 1 to 100. The less common S_D_R is Input dominant and is selected with S_D_R values between 0 to 1.


Feedback dominant applies the derivative action to the integrator feedback term of the PID equation and is more stable than input dominant derivative. This will not take corrective action as early and it will be less noise sensitive. When tuning the derivative, the S_D_R will be established in the 1 to 100 range because it is easier to tune and more forgiving of excessive values. Most PIDs will employ feedback dominant derivative.

Input dominant derivative applies the S_D_R term before the integrator term of the PID equation. When the S_D_R is less than 1, the derivative is input dominant and reacts very quickly to process upsets. This function is very adapted for PIDs that control the load parameter, such as load shaft turbine speed. Since the input dominant derivative is so sensitive, it should be reserved only for applications without high frequency noise.

Except for input dominant and feedback dominant features, the reciprocal of one domain will appear identical in the other domain. As an example, consider an S_D_R of 5.0, the reciprocal being 1/5. That means that an S_D_R of 5.0 will appear the same as S_D_R of 0.200. The difference in response between these values of 5.0 and 0.2 is in the dominance feature.

If in doubt about the type of derivative to use, then set up for feedback dominant,
 $1 < S_D_R < 100$.

PROPORTIONAL + DERIVATIVE (CLOSED LOOP)

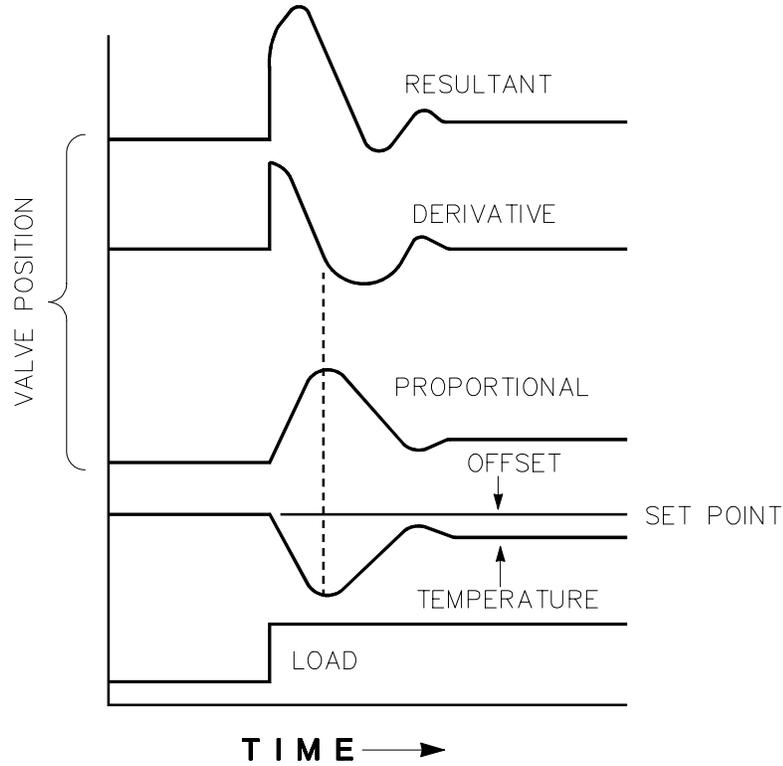


830-365
92-08-03 DAR

This Closed Loop graphic presentation shows how Derivative acts to oppose a change in process in either direction. The dashed line shows the Derivative action going through zero to oppose the process deviation traveling toward zero. Notice offset still exists between the desired set point and the drooped control point that resulted from the load change.

The top curve is the resultant controller output, Proportional plus Derivative.

If an upset (momentary) had occurred rather than a load change, there would be no offset.

DERIVATIVE (EFFECTS OF SETTINGS)

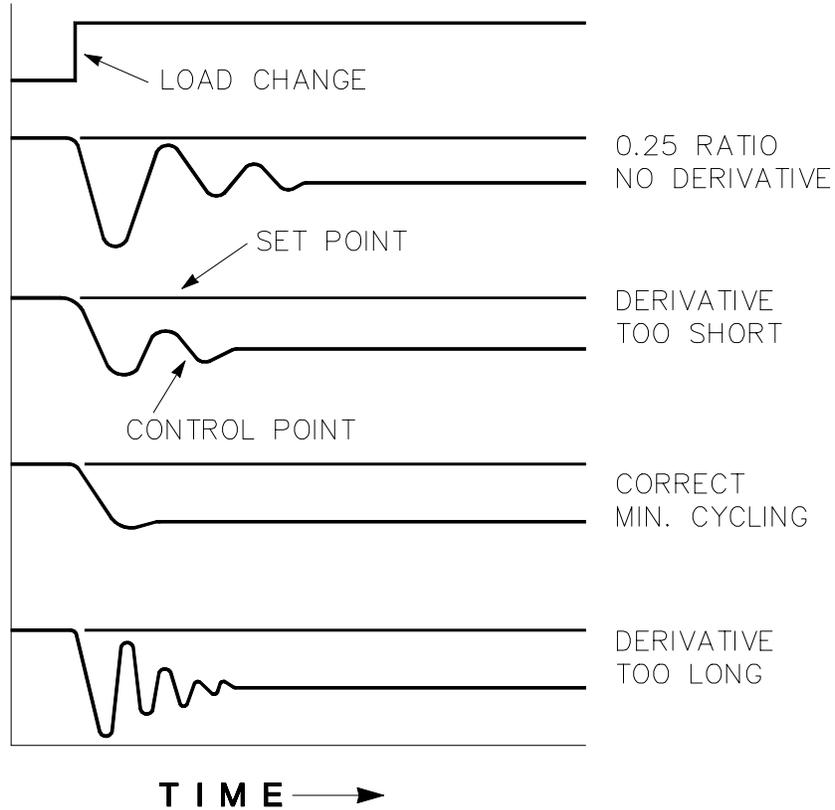


830-366
92-08-03 DAR

This graphic presentation shows the effect of Derivative settings. The curves are relative since it depends on what type of control is desired in order to properly adjust Derivative time. For example, if minimum cycling is desired (as is shown here) then Derivative is added to the 1/4 decay cycle provided by Proportional until more than one cycle is removed and of course the 1/4 decay is destroyed. However, in most cases it is desirable to retain the 1/4 decay cycle, in which case Derivative is added to the point of removing only one cycle from the 1/4 decay ratio then the gain is increased until the 1/4 decay ratio is restored.

In all the above curves, you will note offset exists since offset can only be eliminated by the addition of Integral (or Reset).

PROPORTIONAL + INTEGRAL + DERIVATIVE (CLOSED LOOP)

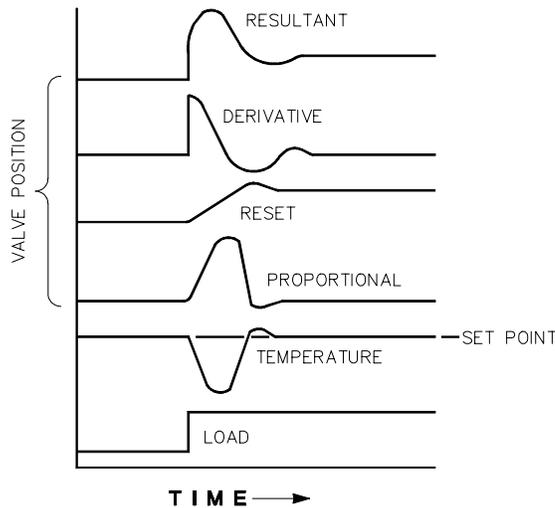

This graph shows the relationship of valve position to the interaction of the modes of control whenever a load change takes place in closed loop.

As the temperature drops due to the load change, the proportional action moves the control valve proportionately to the measurement (temperature) change. The reset adds to the proportional action as a result of the magnitude and time (duration) of the deviation. And the derivative temporarily over-corrects based on the speed at which the measurement moves in any direction. The resultant curve (at the top) shows a similar over-correction (in this case), but in addition the valve will stay at the new position required to keep the measurement at the set point.

CHAPTER 3 SUMMARY

INTEGRAL: Output acts on error duration.

- ! Eliminates error

The Integral action duplicates the Proportional response each minute and "walks" the output towards one extreme or the other.

Since the Integral term is so dependant on the Proportional Gain, the Integral must be set only after the Proportional Gain has been established.

DERIVATIVE: Output change proportional to rate of change of the process variable.

- ! Compensates for transfer lags
- ! Accelerates correction

In summary, Derivative provides a temporary over-correction to compensate for long transfer lags and reduce stabilization time on process upsets (momentary disturbances).

Derivative acts by advancing the Proportional action. Derivative acts at the start of the process change, when the process changes its rate and when the process stops its change.

Factors determining "how much" are: The Proportional setting, the Derivative setting and the rate of change of the process variable.

Caution areas are: (1) If the Derivative is physically installed after the Proportional circuit, then the Derivative settings affect Set Point changes; (2) Do not use if high frequency noise is normally in the measured variable or the main lag is dead time.

After Proportional is set to 1/4 decay ratio and Derivative is adjusted to remove one cycle as well as decreasing the 1/4 decay ratio, then the Proportional gain can be increased to restore the 1/4 decay ratio.

CHAPTER 3 REVIEW

I. Control

A. On-Off Control

- (1) High Sensitivity
- (2) Provides satisfactory control in certain applications.
- (3) No difficulty with load change conditions.

B. Proportional Control

- (1) Reduced sensitivity to eliminate cycling.
 - (2) Difficulty encountered with load change conditions; and with measurement and process lags.
1. Response - Proportional.
 2. Description - Controller output change is Proportional to measurement change only.
 3. Characteristic - Provides stability, eliminates hunting or cycling.
 4. Units for expressing amount - Proportional, Gain, Sensitivity.
 5. How does it act? By changing controller output proportionally to change of measurement.
 6. When does it act? When process changes.
 7. How much? Proportional to measurement change.
 8. What happens when the measurement changes? Output changes (Proportional to measurement change only).

II. Brief review of Integral Response.

- A. Definition. A response which duplicates Proportional action whenever a deviation occurs (offset between set point and process variable).
- B. Function. Removes offset due to process or set point load changes only.
- C. Units to express amount. Min./Repeat is Reset Time, Repeats/Min. is Reset Rate.
- D. Effect of Reset setting on control. Too fast Reset causes cycling. Too slow Reset results in longer offset recovery time.
- E. How does Reset response act? By duplicating Proportional action.

- F. When does Reset act? Any time a deviation between set point and process variable is present.
- G. What four factors determine how much Reset effect occurs?
 1. Magnitude of load change.
 2. Duration of load change.
 3. Proportional Gain.
 4. Reset Rate.
- H. When is Reset action required? Whenever a deviation or load changes are frequent.

III. Brief review of Derivative Response.

- A. Description of Proportional + Derivative. A throttling control system with accelerated correction (temporary over-correction).
- B. Functions. (Reduces stabilization time on process (disturbances) momentary upsets and compensates for long transfer lags such as may be encountered in temperature.)
- C. Units. (Minutes)
- D. How does it act? Advances Proportional action.
- E. When does it act? At start of process change, when rate changes, when process change stops, any time the process changes.
- F. What three factors determine how much?
 1. Proportional gain.
 2. Rate setting.
 3. Rate of change of variable.
- G. Caution for rate of change of the Set Point.
 1. Depends on where Rate is installed in circuit before or after Proportional (Before Proportional is OK.) (After Proportional, set point changes are affected by Derivative. Also moving Derivative while controller is in Auto will move valve.)
 2. Do not use if main lag is dead time.
 3. Do not use if high frequency disturbance exists in the measurement.
- H. Effect of gain (Proportional) when adding Reset or Rate (Derivative)
 1. Less Proportional to restore 1/4 decay ratio after adding Reset.
 2. More Proportional to restore 1/4 decay ratio after adding Derivative.

CHAPTER 4 TUNING GUIDELINES

CONTROLLER TUNING

- ! **Control loop factors versus controllability**
- ! **Suitability of responses**
- ! **Criteria for good control**
- ! **Controller tuning method**

I. Control Loop Factors versus Controllability

The existence of a Control Loop does not always mean that the system is capable of controlling or controlling to the degree required. Severe changes in operating conditions, such as production capacity, may require changes in any one or more of the following items to restore proper control.

A. Measurement System (transmitters)

1. Point to measurement should be such as to quickly detect changes in the controlled variable.
2. Measurement response should be fast.
3. The instrument range of measurement should be compatible with the (1%) degree of control desired.
4. Accuracy should be compatible with process requirements.

B. Controllers

1. Modes should be matched to the application.
Range of adjustment of modes (Proportional, Reset, Derivative).
2. Controller should be in alignment.
3. Controller must be tuned for specific conditions.
4. Little dead time/hysteresis.

C. Final Control Elements (Valves)

1. Valve must be properly sized under normal process conditions. (Should not operate at or near full closed)
2. Valve response must be precise. (Position)
3. Valve must be of proper design. (Linear, equal %, etc.) Refers to flow characteristics versus % opening.
4. Type of shutoff required.
5. Power to close against the differential pressure.

D. Controlling Means or Medium or Manipulated Variable

1. Must be capable of forcing control action, such as Recycle flow, Steam flow, to Reboiler etc. to force level or differential pressure or temperature changes.
2. Should be capable of being applied in direct response to final control element control signal.


E. Process

1. Must be capable of control (proper design of equipment).
2. Control Loops must be compatible with the control system.
3. The loop should be designed with the objective of making the controller's job easy.
4. Variable selected must be the one that provides control desired (temperature, pressure, level, flow, X).

II. Selection of Controller Responses

In general, "good" control should include:

- A. No tendency toward self-excitation.
- B. Process should remain close to or at set point during steady state operation.
- C. Process should match set point after load change quickly and with minimum overshoot.
- D. Proportional control alone is used when:
 1. Stability of control is needed over "on-off" control.
 2. Set Point changes and load changes are rare.
- E. Consider addition of Reset when frequent set point change and load changes occur to eliminate offset. Avoid the use of Reset when the controller is not continuously connected to final control element. (i.e. 2 controllers through a selector switch)
- F. Where overshoot on start-up is undesirable, consider addition of Derivative when minimum recovery time is desired or where system lag is long. Avoid addition of Derivative if the process has high frequency disturbances or if dead time lag is the main system lag.

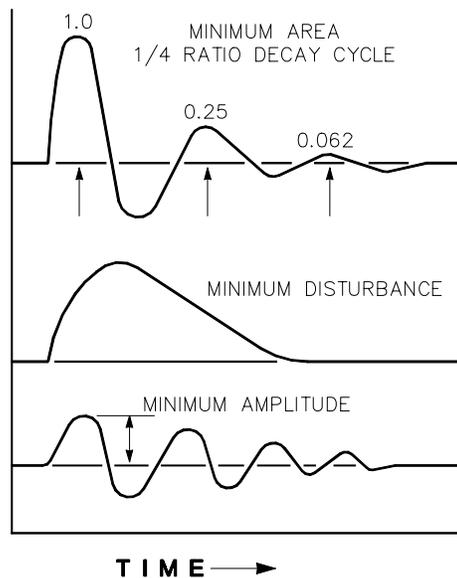

830-368
92-08-03 DAR

III. Criteria for Evaluating "Good" Control

- A. Stability.
- B. Minimum or no overshoot on start-up.
- C. Minimum area under the curve.
- D. Minimum time to reach the Control Point.

It may not be possible to have all at the same time! Therefore, a compromise between "A" and "C" is generally accepted. Depends on response of the process and what can be tolerated.

CONTROLLER TUNING METHOD SAMPLE

Systematic trial and error.

PROPORTIONAL

1. Put controller on Manual - from this step on it is important that no upsets or load changes occur to process.
2. Turn off Reset and Derivative (minimum effect).
 - a. Lock normal valve loading pressure
 - b. Set Integral for a minimum effect. In Woodward controls, using Integral Rate, set "INT_GN" to low number. If control had used RESET Time, then turn reset to a high value. If Reset is not properly identified, make a small load change, measure and record recovery time, then move Reset a small amount, measure recovery time, then make another small load change. If offset recovery is shorter with smaller number, then Reset is time. If a smaller number yields longer recovery, then Reset is rate.
 - c. Set Derivative to minimum effect. Turn Derivative, in Woodward controls "S_D_R", to high number, SDR = 100.
3. Install a small step change to determine speed of process.
4. Record normal valve position and set point/Control Point relationship before proceeding in order to know where process normally belongs (by where the valve normally belongs).
5. Set Proportional at a low position, around .01 to .10.
6. Put controller in automatic and install upset of 1 to 10% depending on how much swing process can tolerate. All upsets or load changes should be installed around set point and should be as close to the same as possible (both amount and rate of change).
7. Allow time for at least 90% of the change to take place and record cycle if any. Return controller to manual when changing Proportional (if this is peculiar to type of controller being tuned). Woodward controls do not need to be placed in manual for Proportional gain changes.
8. If no cycle occurs, increase Proportional by doubling gain until first small cycle appears. If observation is in error and large cycling begins, switch to manual and return process to normal by manually positioning control valve to position recorded in step 4 above. If the application is turbine, then reduce Proportional Gain quickly, rather than a manual mode, to regain stability.
9. After first small cycle is seen, increase Proportional in smaller increments until 1/4 decay ratio is obtained. Be sure to allow time for 90% of change to take place before changing settings.

INTEGRAL

10. After 1/4 decay ratio is obtained, add Integral to remove offset conditions only.
11. Turn Integral gain on to very slow action (.01 to .1 Repeats). Make set point disturbance change of 2 to 10% depending on how much can be tolerated by the process. If 1/4 ratio is not affected, double Reset action until first effect is seen (similar to Proportional step 8). After first effect is seen, add Reset in small increments until 1/4 ratio is affected to degree required and/or one more cycle is added to the Proportional cycle and the 1/4 ratio grows toward 1/2.
12. If other than 1/4 decay ratio is desired, then add Reset until stability is only slightly affected.
13. Determine recovery time of a load change (set point change of 2 to 10% depending on how much can be tolerated) if disturbance upsets were used to tune Reset mode.
14. Determine cycle of disturbance (upset) if load changes were used to tune Integral mode. If excessive cycling occurs, turn Integral off. If cycling does not recover in 1/4 ratio after Integral is turned off, switch to manual.
15. When one cycle has been added to 1/4 decay ratio as in step 11, leave Integral setting as is and lower Proportional slightly to restore original 1/4 decay ratio, then check for offset recovery time. If recovery time is too long, add more Integral as in step 11. Then lower Proportional to restore 1/4 decay ratio.

DERIVATIVE

16. Turn Derivative on to minimum (highest number).
17. Install a very small disturbance if excessive cycling occurs, turn Derivative off. Process will recover. If it does not, switch to manual and return valve position to normal.
18. If no cycling occurs, continue to add Derivative in small increments, by lowering S_D_R value, until one cycle is removed from 1/4 decay ratio. Make the same upset changes as for tuning Proportional only.
19. After 1/4 decay ratio is just affected, leave Derivative setting as is and increase Proportional until 1/4 decay ratio is restored.
20. Check both upset conditions and load change conditions after all above steps are completed. Further refinement is only possible through restarting procedure and more careful attention of 1/4 decay ratio or to desired stability attained from Proportional response tuning.

CONTROLLER FIELD TUNING GENERAL

The quality of regulation obtained from an automatic control system depends upon the adjustments that are made to the various controller modes. Best results are obtained when the adjustment (tuning) is done systematically. Prior training and experience in controller tuning are desirable for effective application of this procedure.


This procedure will lead to controller settings which will provide after a load change:

- A. Process control without sustained cycling.
- B. Process recovery in a minimum time

Controller settings derived for given operating conditions are valid over a narrow range of load change. The settings made for one operating set of conditions may result in excessive cycling or highly damped response at some other operating condition. This procedure should be applied under the most difficult operating conditions to assure conservative settings over the normal operating range.

There are several methods of controller tuning in use. This procedure presents one which will be easiest to use, and at the same time, minimizes process upset. This method is one of systematic trial and error.

The method given is based upon the 1/4-ratio decay cycle. The peak of each cycle is 1/4 of the preceding one. The objective is to produce a trace like the figure below.

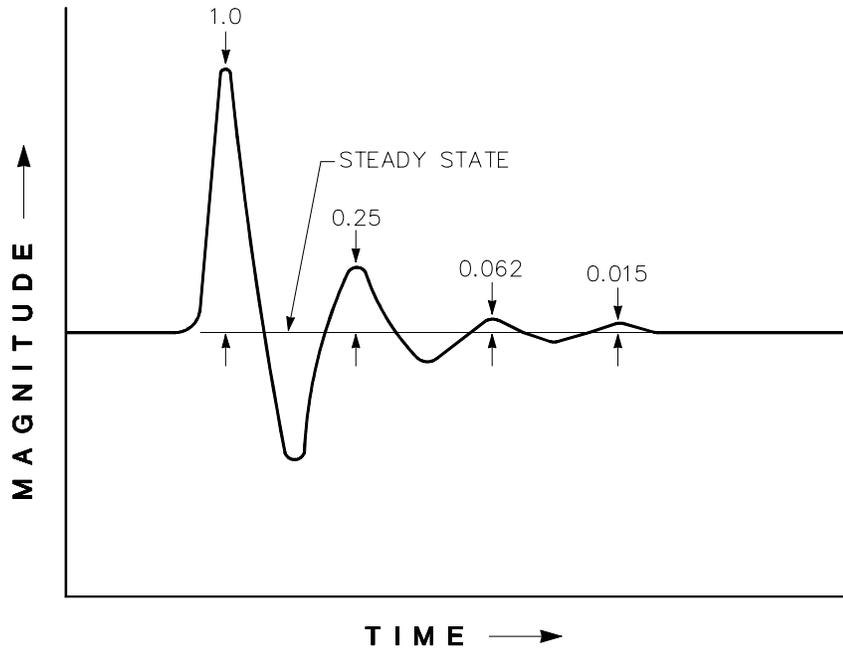

830-369
92-08-03 DAR


1/4 RATIO DECAY CYCLE

It is good practice to keep the average of the set point changes near the normal set point of the process to avoid excessive departure from normal operating level.

After each set point change, allow sufficient time to observe the effect of the last adjustment. It is wise to wait until approximately 90% of the change has been completed.


CONTROLLER FIELD TUNING PROCEDURE

1. Have the process steady state on manual control at the normal set point. It is important that, for the duration of the controller tuning operation, no load changes take place. The occurrence of a load change may cause a misinterpretation of the recorder trace. Turn the Integral adjustment to the position of low Reset response, that is place the Reset adjustment at .02 repeats per minute (or 50 minutes per repeats). Adjust the Proportional Gain to fairly low setting. (The actual value of the Proportional Gain will depend upon the type of process variable being controlled.) Leave it this way until it is assured that the process has reached steady state.
2. Turn the Integral adjustment to minimum Reset effect; this will reduce or eliminate the Integral function. Check to see that Derivative adjustment is set for minimum Derivative, or in Woodward controllers at 100.
3. Switch to automatic control. Make a small change* in the set point and observe the response of the process to the Proportional Gain setting. If little or no cycling takes place, increase the Proportional Gain to 150% its previous value and make another small set point change. After each set point change, increase the Proportional Gain to twice its previous value until an "Optimum Proportional" response curve (see below) is obtained. If a change in Proportional produces a "Proportional Too High" curve (see below), lower the Proportional Gain to its last previous setting. The "Proportional Too Low" curve illustrated below represents the condition in which the proportional is too low.

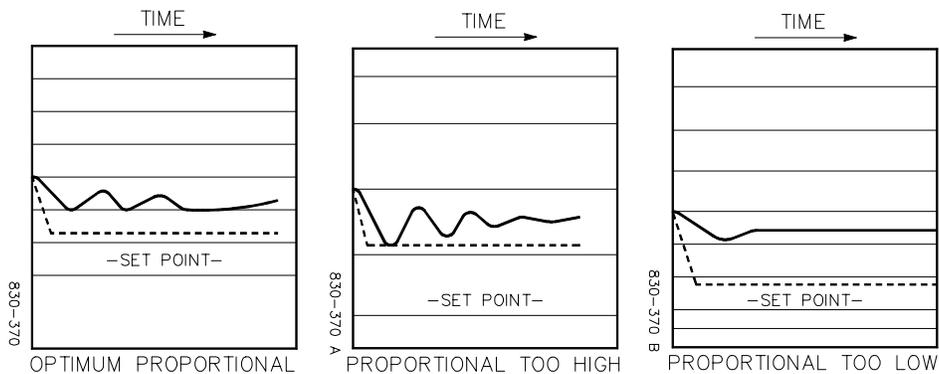

*Set point changes can be made either up or down scale. The second change should return the set point to its original setting. Repeat this pattern through the tuning procedure.

- With the Proportional Gain at the setting previously obtained in Step 3, make a change in set point and observe the recovery cycle. If there is no excessive cycling, increase the Integral to .04 repeats per minute (or 25 minutes per repeat). Make another set point change and observe results. After each set point change, make a change in the Reset adjustment to increase the Reset by 50% the previous Reset effect. Continue in this manner until a response curve like "Optimum Reset" (see below) is obtained. If an adjustment is made which produces a response curve like "Too Much Reset" (see below), then reduce the setting of the reset to the last previous value.

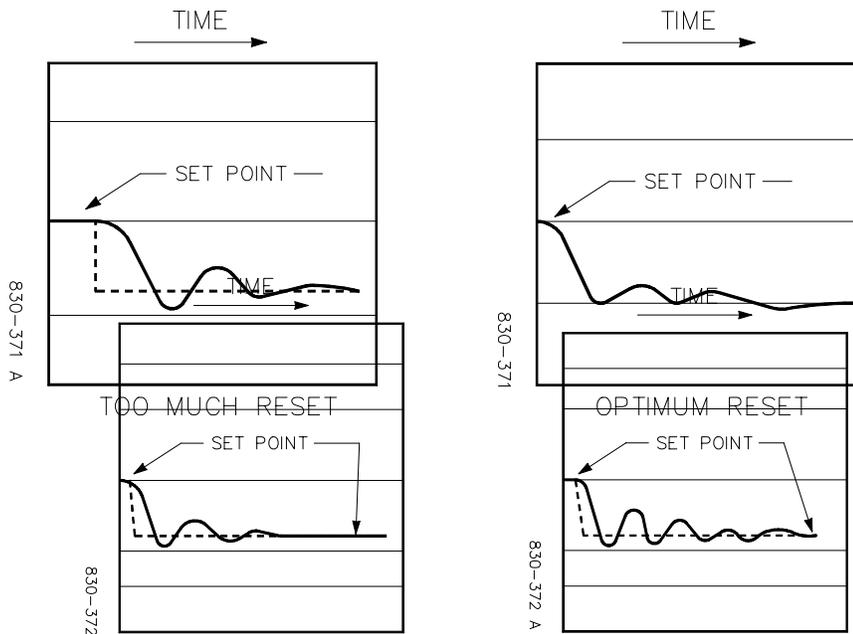


OPTIMUM MODE

TOO MUCH DERIVATIVE

- With the Proportional Gain and Integral adjustments at the values previously obtained, turn the Derivative adjustment to minimum or to a setting 30. Make a small change in the set point and observe the response curve. If there is no excessive cycling, decrease the Derivative ratio. Make another small change in the set point and again observe the response. Continue making small set point changes and halving the Derivative time until a Optimum Mode curve (see below) results. If a Derivative setting produces a curve with "Too Much Derivative" (see below), reduce the Derivative time to the previous value.
- With the Proportional Gain, Integral, and Derivative adjustments at the values previously determined, repeat steps 3, 4, and 5 until controller adjustments show no further improvement. Normally, it will be found that with Derivative the Proportional can be increased. Retune the Integral function with both Proportional and Derivative settings at values which have just been developed.
- Now adjust the controller Proportional Gain with settings that produce a 50% decay. This is the worst case accepted response. The final Proportional Gain will be the smaller of either half of this value or 80% of the value at the quarter decay ratio.

8. Have the operator make a process load change to verify the adequacy of the controller settings. Pay particular attention to the Reset response. The figure below illustrates a typical curve.

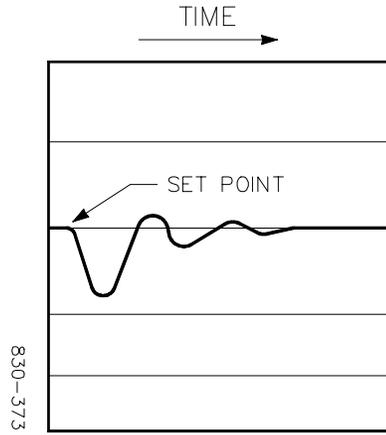

**TYPICAL RESPONSE
TO LOAD CHANGE**



WOODWARD
Industrial Controls

Rocky Mountain Regional Office
Tel 970-663-3900 • Fax 1 970 962-7050

Northeast Regional Office
Tel 610-539-6200 • Fax 610-539-7600

Southeast Regional Office
Tel 205-987-8686 • Fax 205-987-1321
and

Tel 423-992-0236 • Fax 423-992-5082

Gulf States Regional Office
Tel 713-666-2211 • Fax 713-666-1333

Midwest Regional Office
Tel 708-747-2565 • Fax 708-747-2619

Northwest Regional Office
Tel 425-637-8370 • Fax 425-637-8403

Or visit our Website:
<http://www.woodward.com>

International Woodward Offices: Australia • Brazil • Canada • China • Czech Republic • Germany • India • Japan • Korea
Mexico • New Zealand • Poland • Singapore • The Netherlands • United Arab Emirates • United Kingdom • United States of America